



AERO SPORT

TRUE WIRELESS EARBUDS



QUICK START GUIDE

GETTING STARTED


- ① Y Cable charging port
- ② Right earbud LED indicator
- ③ Right control button
- ④ Left earbud LED indicator
- ⑤ Left control button

Ⓕ Left Earbud

Pause/Play/End Call, Previous Track

Ⓖ Right Earbud

Pause/Play/Answer Call, Next Track

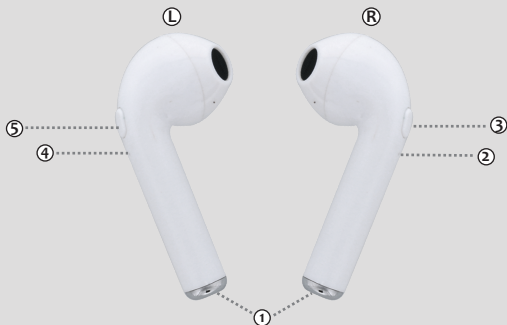

CHARGING YOUR EARBUDS




- Plug Y cable into bottom of earbuds (1) Plug USB end of Y cable into USB power supply.
- Earbuds LED indicators (4, 2) will illuminate Red, indicating that the earbuds are charging properly. When Earbuds LEDs (4, 2) turn solid blue, earbud batteries are fully charged.

STEREO MODE (DUAL EARBUD USE)



- Place earbuds in your ears.
- Make sure Bluetooth® Search Mode is turned off on your mobile device.
- Hold the right earbud button (3) for 3 seconds and then press left earbud button (5) for 3 seconds until they are powered on. (Earbud LEDs will flash Red and Blue to indicate that they are in Link mode.)
- Earbuds will automatically link together after a few seconds, and earbuds will alert “connected” (LEDs will flash blue)
- Once Earbuds are linked together you may proceed to pairing with your mobile device.

PAIRING

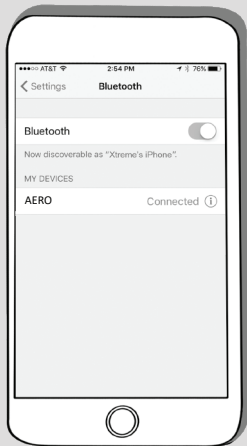

- Enable Bluetooth search mode on your mobile device and search for pairing name “AERO” and select it on your mobile phone. Once the earbuds are successfully paired a notification will sound “connected.”
- Now you can enjoy your true wireless Bluetooth Earbuds.

*Note: Once earbuds have been initially paired successfully with your mobile device they will automatically pair the next time they are powered on.

OPERATING BLUETOOTH EARBUDS

Function	Operation
Power On	Press (3) or (5) for 3 seconds
Power Off	Press (3) or (5) for 5 seconds
Play/Pause	Single press (3) or (5)
Answer/Reject	Answer (5) or Reject (3)

Earbuds	LED indications (2) & (4)
Power On	Red and Blue LED will flash 1 second
Link Mode	Flashing Blue + Red
Paired Successfully	Flashing Blue
Low Battery	Flashing Red
Power Off	LED Off
Earbuds in Cradle	
Charging	Solid Red
Fully Charged	Solid Blue

MONO MODE (SINGLE EARBUD USE)



- Remove Y cable from earbuds and power source and power on by pressing the control button (3) or (5) for 3 seconds depending on which earbud your using.
- Once earbud is powered on, proceed to **PAIRING**

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**