



POWER PLAY

TRUE WIRELESS SPORTS BUDS



BLUETOOTH



SWEAT RESISTANT



TOTAL PLAYTIME



SECURE FIT

855-999-8041 | WWW.XTREMECABLES.COM

GETTING STARTED



- 1 LED Indicator
- 2 Volume Up (Long Press)/
Next Track (Short Press)
- 3 Volume Down (Long Press)/
Previous Track (Short Press)
- 4 Charging Port
- 5 Multi-Function Button
(Power On/Off, Pause/Play,
Answer/End Call)

Note: Functions apply to both sport earbuds

CHARGING SPORT EARBUDS

- Using the supplied charging cable, charge (4) your Power Play Sport Earbuds for 2-3 hours. The LED charging indicator (1) will illuminate **red** while charging.
- The LED indicator (1) will turn off automatically once the earbuds are fully charged.
- Do not charge sport earbuds longer than the suggested time. Do not charge overnight.

Power Play TWS Sport Earbuds can be used as a pair for stereo sound, or as a single earbud use for mono sound. While using earbuds as a pair during calls, both earbuds will stream call audio.

POWERING ON (MONO MODE)

- Press and hold the multi-function button (5) on one sport earbud. The sport earbud will power on and a “power on” voice notification will sound.
- The LED indicator (1) will begin flashing blue and red, indicating that that the sport earbud is in “Pairing” Mode.
- Proceed to the Pairing instructions below.

POWERING ON (STEREO MODE)

- Press and hold the multi-function button (5) on both earbuds for 3 seconds. The sport earbuds will power on and a “power on” voice notification will sound.
- The LED indicators (1) on each sport earbud will begin to flash blue and red, indicating that both sport earbuds are linking to one other.
- Once earbuds are successfully linked with one another, you will hear the voice notification “connected”, at which point you may begin to pair the sport earbuds with your Bluetooth® device.

PAIRING

- Enable Bluetooth® search mode on your mobile device and search for pairing name “POWERPLAY” and select it on your mobile phone. Once the sport earbuds are successfully paired, you will hear the voice notification sound “connected.”
- Once successfully connected to your mobile device, you may now enjoy your Power Play True Wireless Sport Earbuds.

OPERATING BLUETOOTH® SPORT EARBUDS

| FUNCTION | OPERATION |
|------------------|---------------------------------------|
| Power On | Press (5) for 3 seconds |
| Power Off | Press (5) for 5 seconds |
| Play/Pause | Single Press (5) |
| Answer/ End Call | Single Press (5) During Incoming Call |
| Volume Up | Long Press (2) |
| Volume Down | Long Press (3) |
| Next Track | Single Press (2) |
| Previous Track | Single Press (3) |

| EARBUD STATUS | LED INDICATOR |
|---------------------|----------------------------------|
| Power On | Red & Blue LED Flash alternately |
| Power Off | Flash Red Twice then remain Off |
| Link Mode | Flashing Red & Blue Quickly |
| Paired Successfully | Flashing Blue Slowly |
| Low Battery | Flashing Red |
| Charging | Solid Red |
| Fully Charged | LED Off |

SAFETY & CARE INSTRUCTIONS

Failure to follow these safety instructions can lead to fire, electrical shock, personal injury, property damage or damage to this unit. Make sure to read this entire manual before initial use.

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat sources and direct sunlight.
- Do not expose the unit to extremely high or low temperatures.
- Use the product in a location with a temperature of 32°F - 95°F.
- Do not let the unit come in contact with water or any liquid. If it becomes wet, immediately unplug from the power source.
- Do not handle the unit, USB cord, or wall charger with wet hands.
- Do not let dust or other debris accumulate on the product
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not place magnetic cards or similar items near this product.
- Be sure to use the specified power source and voltage.
- Do not use a voltage converter/travel adapter.
- Be sure the wall charger is inserted all the way into the electrical outlet. When not in use, unplug the wall charger.
- Place the unit on a flat, sturdy surface during charging.
- Keep the unit out of reach of children as this product is not a toy

IPX4 RATING

Power Play Sport Earbuds are resistant to water splashes from any direction. **Do not submerge underwater.**

ONE YEAR WARRANTY

Xtreme warrants its products for **one year** against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service via email at customerservice@xtremecables.com

WHAT'S INSIDE

Power Play Sports Earbuds w/ Ear Cushions
Charging Cable
Protective Carrying Case
Manual

