



RELEX™

BLUETOOTH® HEADPHONES W/ MICROPHONE



ENGLISH

MANUAL (ENGLISH)

Charging the Headphones

- Please make sure battery is fully charged. For best results (or to charge faster) do not use the headphone while charging.
- To charge your Xtreme REFLEX Bluetooth Headphone, connect the supplied cable to the Micro-USB (8) charging port and connect the other end to a USB power outlet (5V adaptor not included). LED indicator(7) will illuminate RED to indicate that the headphone is charging. Allow approximately 3-4 hours charging time to fully charge the headphone. When battery is fully charged, the LED indicator will turn off.

Operating the Bluetooth Speaker

1. Turn the Reflex Bluetooth Headphone on by switching the power switch (1) to the ON position. The LED light indicator (7) will begin flashing blue and red to indicate that the earpiece is now in pairing mode.
2. The headphone will enter pairing mode. Enable Bluetooth search mode on your audio device and search for pairing name "REFLEX" and select it on your audio device. Once the Xtreme Reflex Bluetooth Headphone has successfully connected, An audio message will state that the device has successfully connected, and the LED light indicator will flash blue periodically.
3. Press the Answer Button (2) to answer calls, pause and play and hang up call.
4. To change to the previous track, press the "⏮" (3)
5. To change to the next track, press the "⏭" (4)
6. To lower volume, press the "V-" (5)
7. To raise volume, press the "V+" (6)
8. Use the 3.5mm port to connect with your device via 3.5mm Aux cable. It also works when your headphone's battery is low power.
9. To Power down the Headphones, switch the power switch to the "OFF" position. The LED indicator will remain off.



Safety and Care Instructions:

- Keep the unit away heat sources, direct sunlight, humidity, water and other liquids.
- Do not operated the unit if it has been exposed to water, moisture or other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user as risk and void warranty.
- Do not puncture or harm the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children. Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit. In order to prolong battery life, turn off when not in use.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**

Package Contents:

Flexible Bluetooth Headphones

3.5mm Audio Cable

Micro USB Charging Cable