


POWER BANK INSTRUCTIONS

Initial charge should be done with the included Micro USB Cable (Charge time will vary by device)

Usage:

1. To charge the power bank, connect the battery via the micro USB to USB cable (included) to your computer, home or car charger. Charging time of the power bank varies between **3 to 4 hours**.

2. Use the built-in charging cable to charge your device from the power bank. PLEASE NOTE: To charge a Micro USB device, the Lightning adapter must be facing up. To charge a Lightning device, the Micro USB adapter should be facing up.

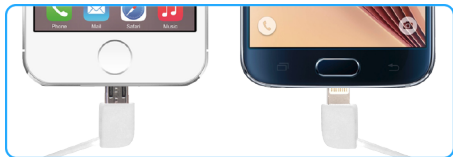

3. Press power button to activate power bank and begin charging your device.

- Make sure the power bank is fully charged before charging your device
- LED indicators will illuminate to show battery power
 - 4 LED – 100% charged
 - 3 LED – 75% charged
 - 2 LED – 50% charged
 - 1 LED – 25% charged

**THIS ITEM CONTAINS A NON-REPLACEABLE BATTERY.
WHEN THE BATTERY IS DEPLETED, PLEASE FOLLOW
YOUR LOCAL OR STATE GOVERNMENT'S GUIDELINES
FOR DISPOSAL**

CAUTION:

Use this only as intended

To prevent fire or shock hazard, do not expose this unit to rain or moisture. Do not use within a meter of any water such as swimming pools, bathtubs, or sinks.

Do not expose the batteries to excessive heat such as sunshine.

To avoid electrical shock, do not disassemble. Refer servicing to qualified personnel only. Never insert objects of any kind, other than authorized item into the product as they may touch dangerous voltage points or short out parts that could result in fire or electrical shock.

Do not dispose of this product in fire. Refer to local country, state, and city guidelines for appropriate methods of battery disposal.

This product contains small parts that may cause choking if swallowed. Not intended for use by children under 3 years of age.

- "Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

- "NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help."

Fully charge power bank before use.

DO NOT LEAVE CHARGING OVERNIGHT.

DO NOT CHARGE MORE THAN 3-4 HOURS.