



WIRELESS CHARGER POWER BANK

4000 mAh SLIM PORTABLE CHARGER



ENGLISH

MANUAL (ENGLISH)

Recharging Power Bank

- Before using the wireless power bank for the first time please charge the power bank fully. We recommend USB chargers with a 2A output. Charging time is between 2-3 hours for a full charge using a charger with 2A output.
- Connect the micro-USB connector of a USB cable (included) into the micro-USB input port, and connect the other end of the cable to a USB charger (not included).
- When charging, the blue LED indicators will flash one by one. Each blue light indicates 25% of the charge. When fully charged, all blue LED lights will stay on.
- When not connected with an external power source, the device supports two separate modes: wired and wireless charging mode.

Wireless Charging Mode

- To activate wireless charging mode, triple click the power button next to the LED indicators. Once activated the blue LED indicators will remain on. The power bank is now ready for wireless charging.
- Place your Qi compatible smartphone onto the power bank making sure its centered on the wireless icon. During wireless charging the blue LED indicators remain on.
- To deactivate wireless charging mode, double click the power button and the blue LED indicators will turn off indicating that wireless charging mode is off.

Wired Charging Mode

- To charge a compatible device with wired charging, connect it to the USB output port with your smartphones charging cable (not included)
- To activate wired charging mode, triple click the power button next to the LED indicators. Once activated the blue LED indicators will remain on. The power bank is now ready for wired charging.
- To deactivate wired charging mode, double click the power button and the blue LED indicators will turn off indicating that wired charging mode is off.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**

Package Contents:

Safety and Care Instructions:

- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not puncture or harm the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
In order to prolong battery life, turn off when not in use.

Specifications:

- Battery Type- 4000 mAh lithium battery
- Input- DC 5V 2.0 Amp
- Output- DC 5V 2.1 Amp
- Wireless Output 5 Watt