

BLUETOOTH® SPEAKER PHONE

WITH CAR CHARGER



ENGLISH

855-999-8041 | www.XtremeCables.com

MANUAL (ENGLISH)

Introduction

Thank you for purchasing the Xtreme Bluetooth® Speakerphone. This product is a special Bluetooth car charger that can switch the call to the hands-free state via the professional Bluetooth module as long as the mobile phone is provided with the Bluetooth function. When the call is finished, it will be switched to the music play automatically. It can also send the music in your phone to your car sound wireless. You can enjoy the music and answer the call in hand-free mode without refitting your car, which ensure the driving safety while enjoying music.

- 1 Power Adaptor 12V-24V
- (2) Volume Down
- 3 Answer Call/ Hang Up
- 4 Volume Up
- 5 USB Output 5V/2.4A
- 6 Microphone

Operating the Bluetooth Speaker

- Plug the Bluetooth® Speakerphone into the car cigarette lighter socket(1). The unit will start up and the LED will flash blue once it is powered.
- The Bluetooth® Speakerphone will enter pairing mode. Enable Bluetooth search mode on your audio device and search for pairing name XBA9-1010 and select it on your audio device. Once the Bluetooth® Speakerphone has successfully connected, a prompt will sound once pairing has occurred.
- 3. Press the \Im (3) key to answer the call/ hang up.
- 4. To raise and lower the volume level, adjust the volume level on your audio device.
- 5. Long press the (3) key to disconnect your audio device.



Safety and Care Instructions:

- Keep the unit away heat sources, direct sunlight, humidity, water and other liquids.
- Do not operate the unit if it has been exposed to water, moisture or other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit
- · Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user as risk and void warranty.
- Do not puncture or harm the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- · This product is not a toy. Keep out of reach of children.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
- A built-in antenna is provided for the product, so please avoid using the broadcasting station frequency that with a strong signal so as to get a better sound effect.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com