



HYDRO™

WATER RESISTANT SPEAKER



ENGLISH

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**

Package Contents:

Water Speaker with suction cup

Charging Cable

Safety and Care Instructions:

- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not puncture or harm the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
In order to prolong battery life, turn off when not in use.

MANUAL (ENGLISH)

Charging the Bluetooth Speaker

- Please make sure battery is fully charged. For best results (or to charge faster) do not use the speaker while charging.
- To charge your Xtreme Hydro Waterproof speaker, connect the supplied Micro USB cable into the Micro-USB charging port and connect the other end to a USB power outlet (5V adaptor not included). LED indicator(5) will illuminate RED to indicate that the speaker is charging. Allow approximately 3-4 hours charging time to fully charge the earpiece. When battery is fully charged, the LED indicator will turn off.



Operating the Bluetooth Speaker

1. Turn the Hydro Waterproof speaker ON by Holding down the "●" button (1) for Two Seconds. The speaker will state "The Bluetooth device is ready to pair". The LED lights (5) will begin Flashing. (Blue LED lights will remain flashing while the speaker is switched ON)
2. The speaker will enter pairing mode. Enable Bluetooth search mode on your audio device and search for pairing name "HYDRO" and select it on your audio device. Once the speaker has successfully connected, your audio device will state that the speaker has been successfully connected.
3. To change to the next track, short press the + (4) To raise volume, long press the Volume + Button (3) There will be a beep sound when it's the highest volume.
4. To change to the previous track, short press the — (2) To lower volume, long press the Volume — Button (4)
5. Press the ► Play/pause button (3) to pause and play music.
6. Insert microSD card into microSD port to enjoy music stored on the card.
7. To use speaker from a wired audio source, plug in the 3.5mm audio cable into the "Aux" port.
8. To power down the speaker, hold down the "●" button (1) for Two Seconds. There will be a shut sound and the LED indicator will remain off.