



BEATBOX™

PORTABLE WIRELESS SPEAKER



ENGLISH

855-999-8041 | www.XtremeCables.com

MANUAL (ENGLISH)

Charging the Bluetooth Speaker

- Please make sure battery is fully charged before initial use
- To charge your Xtreme BeatBox Fabric Speaker with handle, connect the supplied Micro USB cable into the Micro-USB charging port and connect the other end to a USB power outlet (5V adaptor not included). Allow approximately 3-4 hours charging time to fully charge the speaker.

Operating the Bluetooth Speaker

1. Turn the Bluetooth Speaker ON by switching the power switch to the ON position. The speaker will state that the device is in "Bluetooth Mode".
2. Enable Bluetooth search mode on your smartphone and select pairing name "BEATBOX" on your Bluetooth device list. Once the speaker has successfully connected, there will be a notification sound.
3. To change to the previous track, press the "◀"(1).
4. To change to the next track, press the "▶"(3).
5. Press the "●"(2) to answer calls, pause and play and hang up call.
6. To change to the FM Mode, press the ✱.(4)
7. Use the knob(5) to tune the radio to a desired frequency.
8. Insert TF card into TF port to enjoy music stored on the card.
9. Use the 3.5mm port to connect with your device via 3.5mm Aux cable.
10. To power down the speaker, switch the power switch to the "OFF" position.



Safety and Care Instructions:

- Keep the unit away heat sources, direct sunlight, humidity, water and other liquids.
- Do not operate the unit if it has been exposed to water, moisture or other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not puncture or harm the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children. Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit. In order to prolong battery life, turn off when not in use.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**

Package Contents:

Bluetooth Mini Speaker

USB Cable

Auxiliary Cable