



REPLAY

BLUETOOTH® PORTABLE SPEAKER



ENGLISH

MANUAL (ENGLISH)

Charging your Bluetooth® Speaker:

- Please make sure battery is fully charged before initial use.
- To charge your Xtreme REPLAY Speaker, connect the supplied Micro USB cable into the Micro-USB charging port and connect the other end to a USB power outlet (5V adapter not included). LED indicator will illuminate RED to indicate that the speaker is charging. Allow approximately 3-4 hours charging time to fully charge the speaker. When battery is fully charged, the LED will turn off.

Operating the Bluetooth® Speaker:

1. Turn the Bluetooth Speaker ON by switching the ON/OFF button towards ON. The LED will flash BLUE indicating that the device is in Pairing mode.
2. Enable Bluetooth search mode on your smartphone and select pairing name "REPLAY" on your Bluetooth device list. Once the speaker has successfully connected, a chime will sound and the LED will remain solid BLUE.
3. To raise the volume, long press the plus button (+). To lower the volume, long press the minus track button (-).
4. To go to next track, short press the plus button (+). To go to the previous track, short press the previous track button (-).
5. To pause or play the music, short press the arrow button (>).
6. To Power down the Speaker, switch the ON/OFF button towards OFF. The LED will turn off.

Operating the FM function:

1. Press the mode button (M) once and the speaker will change to FM mode (be sure to have the included micro USB cable plugged into the charging port of the speaker. This will act as an extra antenna for the radio function. It does not have to be plugged into 5V adapter.)
2. To change the station on your radio short press the plus button (+).
3. To quick shuffle the radio stations short press the play button (>).
4. To choose a station while in quick shuffle, short press the play button again (>).
5. To exit FM mode, short press the mode button (M).

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**

Package Contents:

Bluetooth® speaker x 1

Micro USB cable x 1

User manual x 1

Important Safety Information

- Do not plug the unit in any outlet that does not have enough current to allow the device to function. The required specification of USB adapter is 5V1A. Refer to the specifications in this manual for power level of the unit.
 - Liquid: If this unit or its corresponding power adapter has liquid spilled on it, do not attempt to use the unit.
 - Do not attempt to use this product in an outdoor environment as elements such as rain, snow, hail, etc. can damage the product. In case of a storm, it is recommended that you unplug this device from the outlet.
 - Avoid placing this product next to objects that produce heat such as portable heaters, space heaters, or heating ducts.
- THERE ARE NO USER SERVICEABLE PARTS.** Do not attempt to open this product and expose the internal circuitry.