



HELIOS DUO


TRUE WIRELESS **BLUETOOTH®** SPEAKERS



Package Contents:

2 x Bluetooth® TWS Speaker
2 x 1.5ft Micro USB Charging Cable
Manual

MANUAL (ENGLISH)

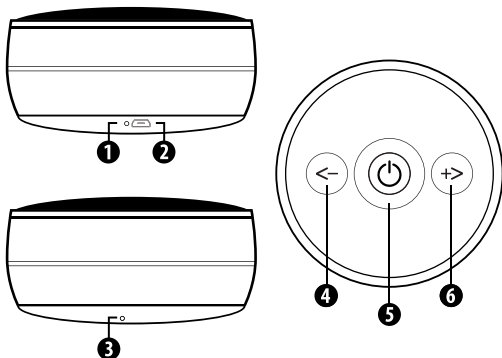

FUNCTION KEY

- | | |
|--|------------------------------------|
| 1. LED Indicator Light | 5. Power On/ Off Button |
| 2. Micro USB Charging Port | 6. Volume Up/
Next Track Button |
| 3. Microphone | |
| 4. Volume Down/
Previous Track Button | |

CHARGING YOUR SPEAKERS

The HELIOS DUO comes with a built-in rechargeable battery. Before using the speakers for the first time, we recommend you charge their batteries fully. Be sure the speakers are off before charging. Use the supplied micro USB cables to charge the speakers. Connect the included micro USB cable to a 5V USB power supply (*not included*) and the micro USB end into the speaker (2). The LED light (1) will illuminate red when the speakers are charging. The LED light will turn off once speakers are fully charged, at which point the speakers will be ready for use. When the battery is low, a warning sound will prompt. When this occurs, please charge your speaker.

POWER ON/ OFF YOUR HELIOS DUO SPEAKERS

Hold the On/ Off button **(5)** for about 3 seconds to turn on the speakers. A blue indicator light will flash. Press and hold again for about 3 seconds to turn off the speakers.

PAIRING ONE SPEAKER

1. Turn the speaker on by holding the on/ off button **(5)** for approximately 3 seconds. The LED indicator **(1)** light will blink blue and beep, indicating your speaker is now discoverable.
2. Be sure the device you wish to pair is no more than 10 feet away from the speaker.
3. Ensure Bluetooth® is enabled on your device. Refer to manufactures instructions to learn how to enable Bluetooth® on your device.
4. Once Bluetooth® is enabled on your device, select “HELIO” from the list of available Bluetooth® devices. Once your speaker has been successfully connected, the LED indicator **(1)** will slowly flash blue and you will hear the word “connected”.
5. If pairing is unsuccessful, turn off the speaker and repeat these steps once more.

PAIRING TWO SPEAKERS

1. Ensure both speakers are turned off before pairing.
2. Ensure the speakers are not connected to any device before pairing.
3. Turn both speakers on simultaneously pressing the power button **(5)**.
4. You will hear a beep from each speaker indicating that pairing is successful between both speakers.
5. Refer to steps 2 through 5 under “Pairing One Speaker” to finish pairing speakers to a device.

MANUAL KEY FUNCTIONS

Your speakers are equipped with a few shortcut keys:

Answering a call

You will hear a ring tone when receiving an incoming call. Press the power button **(5)** to answer the call. Press and hold the Volume Up/ Down **(4, 6)** to adjust the call volume.

Ending/rejecting a call

Press the power button **(5)** to end a call. When receiving a call, press and hold the Play/ Pause button to reject it.

SAFETY AND CARE INSTRUCTIONS

- Do not operate the unit if it has been exposed to water, moisture or other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Keep the unit away heat sources, direct sunlight, humidity, water and other liquids.
- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not puncture the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
- In order to prolong battery life, turn off when not in use.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at
customerservice@xtremecables.com

Specifications:

Bluetooth 5.0

Range: 30ft

Frequency Response Range: 150Hz- 20kHz

Speaker Output: 3W

Charge Time: 2-3 Hours

Play Time: 2-3 Hours

Battery: 300mAh