




TERRA

RUGGED **BLUETOOTH®** SPEAKER



Package Contents:
Bluetooth® Speaker
3ft Micro USB Charging Cable
Manual

MANUAL (ENGLISH)

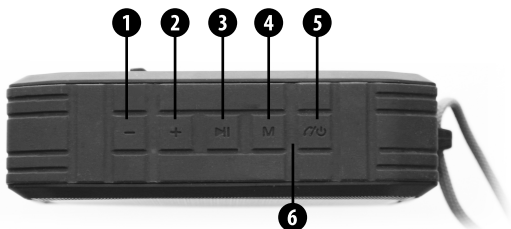

FUNCTION KEY

1. Previous Track/ Volume Down
2. Next Track/ Volume Up
3. Pause/ Play Button
4. Mode Button
5. Power Button/ Answer Call

6. LED Indicator
7. TF Card Slot
8. Aux In
9. USB Port
10. Micro USB Charging Port

CHARGING YOUR BLUETOOTH® SPEAKER

Please be sure that your Xtreme Terra Bluetooth® Speaker is fully charged before initial use. For best results or to charge faster, do not use the speaker while charging. To charge your speaker, connect the supplied cable to the micro USB charging port (10) and connect the other end to a USB power outlet (*5V adaptor not included*) for a minimum of 3 hours.

OPERATING YOUR BLUETOOTH® SPEAKER

1. Turn the Terra Bluetooth® speaker on by pressing the power button (5) until the LED indicator light (6) begins to flash blue. This will indicate that the speaker is in pairing mode.
2. Allow your audio device to be Bluetooth® discoverable, search for the pairing name "TERRA" and select it on your audio device. Once the Xtreme Terra speaker has successfully paired, the LED indicator will remain solid blue.
3. Press the answer button (5) to answer incoming phone calls and to hang up calls. Double press the same button to redial.
4. Press the mode button (4) to switch between the built in FM radio feature and Bluetooth® mode.
5. Press the pause/play button ►|| (3) to pause or play your music, or to scan for a new station when in FM radio mode.
6. To change to the next track, short press the "+" (2). To raise the volume, long press the "+" button (2).
7. To change to the previous track, short press the "-" (1). To lower the volume, long press the "-" button (1).
8. Insert a TF memory card into the TF card slot (7) to enjoy music stored on the memory card, or insert a USB flash drive into the USB port (9) to enjoy music stored on the flash drive.
9. Press and hold the power button (5) to power off the speaker, at which point the LED indicator will turn off.



WATERPROOF DISCLAIMER



This Xtreme Terra Speaker is equipped with a special nano coating to protect internal components from water damage. Improper use and handling of this speaker may and will damage the speaker.

- Be sure that the silicone weatherproof port cover is properly inserted to prevent water and debris from entering the speaker.
- Do not submerge speaker above 3ft of water.
- Do not submerge for more than 30 minutes.
- Do not charge while being submerged or near water.

SAFETY AND CARE INSTRUCTIONS

- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not puncture the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
- In order to prolong battery life, turn off when not in use.

SPECIFICATIONS:

Output Power: 5W

S/N: $\geq 93\text{db}$

Battery: 1200mAh

THD: $\leq 1\%$

Speaker Unit: $\Phi 52\text{mm}$ 4 Ω 5W

TF Format: MP3 WAV

Bluetooth® Solution: AB 5.0

Bluetooth® Distance: Approx. 33ft

Music Format: Bluetooth® protocol

A2DP/AVRCP/HSP

Features: Bluetooth®, AUX, TF, USB,
hands-free, IPX7 waterproof, FM radio

TF: No more than 32G

Charge Time: 2-3 Hours

Play Time: 3-4 hours

Standby Time: 80 hours

Dimensions: 6.6 x 3 x 1.5in

Weight: 370g

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at
customerservice@xtremecables.com