



AURA

LIGHT-UP BLUETOOTH® SPEAKER




Package Contents:


Bluetooth® Speaker
Micro USB Charging Cable
Manual

CHARGING BLUETOOTH SPEAKER

Please make sure battery is fully charged before initial use. To charge your Xtreme Aura Bluetooth® Speaker, connect the supplied Micro USB cable into the Micro USB charging port **(6)** and connect the other end to a USB power outlet (*5V adapter not included*). The LED indicator **(7)** will illuminate RED to indicate that the speaker is charging. Allow approximately 3-4 hours charging time to fully charge the speaker. When battery is fully charged, the LED light will turn OFF.

OPERATING BLUETOOTH SPEAKER

1. Power the Aura Speaker on by sliding the On/Off power switch **(8)**, at which point the LED ring **(1)** will illuminate.
2. The speaker will enter pairing mode. Enable Bluetooth® search mode on your Bluetooth® enabled device and search for the pairing name "Aura" and select it on your audio device. Once the speaker is connected, it will state that the device has been paired successfully.
3. Press the  Pause/Play **(2)** button to pause and play music or answer/end calls.
4. To change to the next track, short press the Volume Up Button **(4)**. To raise the volume, long press the Volume Up Button **(4)**.
5. To change to the previous track, short press the Volume Down Button **(5)**. To lower the volume, long press the Volume Down Button **(5)**.
6. Slide the Switch **(8)** to the OFF position to power down device.

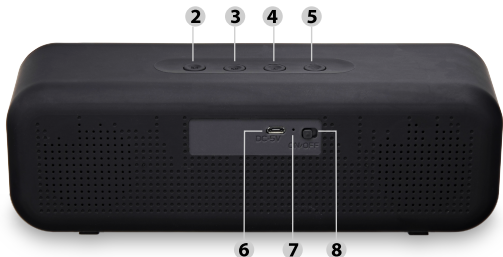

FUNCTION KEY

- | | |
|--------------------------|--------------------------------|
| 1. LED Ring | 5. Volume Down/ Previous Track |
| 2. Mode Button | 6. Micro USB Port |
| 3. Pause/ Play Button | 7. LED Indicator |
| 4. Volume Up/ Next Track | 8. Power Switch |

LED COLOR CHANGE MODES

Press the Mode Button (2) in the order shown below, to alternate between the different color changing modes:

1 Press: *Slow Fade*

2 Press: *Fast Changing*

3 Press: *Music Reactive (Colors change to the beat of your music).*

4 Press: *Single Color (Press the mode button while in "Slow Fade" mode, to hold the desired color).*

5 Press: *LED ring will turn off*

CARE AND MAINTENANCE

- Wipe the product with a damp cloth and dry thoroughly.
- Store the product in a dry area.
- Do not place the device on or near any hot surfaces.
- Please keep this manual in a safe place for future reference.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at
customerservice@xtremecables.com

IMPORTANT

- Do not use the product if it has been damaged in any way.
- Do not use the speaker for anything other than its intended use.
- Keep out of reach of children as this product is not a toy.

SPECIFICATIONS

Bluetooth® Version: 5.0
1200mAh Battery
6W Speaker
Charging Time: 5 Hours
Play Time: 5-8 Hours