


WATERPROOF LED LIGHTS

SUBMERSIBLE LIGHT FOR PARTIES & HOME DÉCOR

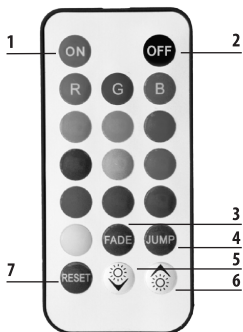

Remote Control

1. On
2. Off
3. Fade
4. Jump
5. Dimness Down
6. Dimness Up
7. Reset



Package Contents:

2 IP68 Waterproof LED Lights
Remote Control
Manual

MANUAL (ENGLISH)

The Waterproof LED Lights (Class 1 LED Product) can be used in or out of water to illuminate things such as baths, flower vases, ice sculptures, table settings and many more. The remote controlled color changing submersible light provides steady light, with smooth transitions that does not flash or flicker.

Operating the Waterproof LED Lights

1. Screw open the light fixture and install 3x AAA batteries in a dry area - do not contact with water. **Tightly screw back together so that no water can get in.**
2. Remove the battery plastic contact tab from the remote control.
3. Turn on the Waterproof LED Light by pushing the "ON" button on the remote control.
4. Put the light in the desired location. You can change the colors and modes of the light with the remote control. The remote control range is up to 25-30 feet in an open area. *NOTE: the remote control is NOT waterproof.*
5. Push the "OFF" button on the remote control to turn off the Waterproof LED Light.
6. To prevent corrosion, remove batteries after each use.

Changing the remote control battery

The battery for the remote control has already been installed. Remove the battery pull tab to operate.

1. The battery compartment is located on the narrow side of the remote control.
2. Remove the empty battery and insert a 3V battery, type CR2025. The positive terminal must point upwards.
3. Place the battery compartment back in the remote control so it locks in place.

WARNING: TO AVOID BATTERY LEAKAGE

1. The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If swallowed, promptly see a doctor and have the doctor call the American Association of Poison Control Centers (1-800-222-1222).
2. Always purchase the correct size and grade of battery most suitable for intended use.
3. Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries.
4. Clean the battery contacts and those of the device prior to battery installation.
5. Ensure the batteries are installed correctly with the regard to polarity (+ and -).
6. Always remove batteries if depleted or if product is to be left unused for a long time.

SAFETY AND CARE INSTRUCTIONS:

- Do not attempt to disassemble the unit. Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- Do not puncture or harm the exterior surface of the product in any way. This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
- In order to prolong battery life, turn off when not in use.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at **customerservice@xtremecables.com**

Technical Data:

Voltage Supply:

Waterproof LED Light	4.5V (3 x battery, type AAA)
Remote Control	3V (1 x 3V battery, type CR2025)